

### Panel Operation:

1 Press MODE key and display DMX512 ADD NO., then press UP and DOWN key choose ADD NO..

2 Press FUNC key and set function, then press UP or DOWN amend parameters.

### Panel Display Description:

1. TURN ON DISPLAY: [REDACTED]!  
run node:DMX512: DMX address:001.

2. Press FUNC key can display: PAN reverse or TILT reverse.

3. PAN reverse: NO/YES.

4. TILT reverse: NO/YES.

Choose one of it, then press UP or DOWN key, corresponding is YES or NO; YES means rotate clockwise, No means reversed rotating.



## CHANNEL DESCRIPTION

DMX Channel	DMX ADD NO.	Function
1、 Flash	0~7	OFF
	8~231	Flash/ Slow to fast
	232~255	ON
2、 Dimmer	0~255	Dimmer/ Dark to bright
3、 Pan	0~255	Pan Max: 0~450°
4、 Tilt	0~255	Tilt Max: 0~270°
5、 Pan fine		Fine: 1.8°
6、 Tilt fine		Fine: 1.8°
7、 Pan & Tilt speed	0~8	Speed adjustable:
	9~255	fast to slow ( by controller)
8、 Stripy	0~10	Open
	11~240	Stripy
	241~255	Fog lens
9、 Focus	0~255	Focusing: near to far
10、 Color wheel	0~18	Open
	19~37	Color 1
	38~56	Color 2
	57~75	Color 3
	76~94	Color 4
	95~113	Color 5
	114~132	Color 6
133~255	Stream: slow to fast	
11、 Color 1	0~255	
12、 Color 2	0~255	
13、 Color 3	0~255	
14、 CMY mix-color	0~255	
15、 CMY speed	0~255	Slow to fast
16、 Reposition	0~255	Reposition after 3 seconds

